

Sensor Dustbin Operational Manual



SD-801B

Item NO.	Dimension	Volume	Power(AC/DC adaptor)
	Length*width*height(cm)		
SD-801B	42*31.5*67cm	45L	6× size AA batteries
	42*31.5*72cm	52L	6× size AA batteries
	42*31.5*77.5cm	60L	6× size AA batteries
	42*31.5*85.5cm	70L	6× size AA batteries

Safety Cautions

※Before using ,please carefully read the safety checkpoints.

Related signs

※For the safety of you and Others ,please abide by The safety caution check-Points.

⚠ Caution

Injury may be caused or the dustbin may break down by wrong operation.

Example of signs

■ Sign are used to indicate and explain the items you must abide by

⊘ This means forbidden

⚠ This means you must do it

※Please remember the points after you read them.

⚠ Caution

⊘ Not be flushed with water ba- Cause the electric and electronic Components in the product.Can Be wiped by wet wipers on its Surface.

⊘ Avoid direct casting of sunshine on the induction receiver window.

⊘ During the open-up process of The cover,don't press the cover With force.

⊘ Dismantling , repair and Alteration of the product Are Absolutely banned.

⚠ When battery is going to run out, Please replace with new ones Instantly

⊘ Don't put anything on the Dustbin cover

Product Introduction

Most dustbins with cover for sale in the market need your hand or foot to press on it.This new infrared induction dustbin doesn't need you to touch it When using it .The cover will automatically open and close,so it's very Sample to use it in hospital,office,home etc.when put your hand or an object Approaches its feeder(induction>window)at a distance of about 15-20cm,the Over will open automatically.After you drop the trash in the bin,then the lid Closed automatically.The product adopts photoelectric technique,it has Stable performance,long using life,and low power consumption.

## Its Parts

### ● Appearance



## Operation Instruction

- (1) Open the batteries cover at the bottom of the lid and insert 6pcs #AA batteries according to the correct polarity then close the battery cover.
- (2) Turn on the power switch on the rear cover, then the indicator will turn red for 3 seconds approx. When the indicator twinkles every 3 seconds, it means the electronic circuit is waiting in a normal status.
- (3) When you need to toss the garbage into the bin, simply hover your hand above the lid within 15cm and it then open. The lid will then close after five seconds of inactivity. The cover will keep open, if your hand or object stays in the induction area.
- (4) When the dustbin is full, I press the "open" button at the induction window to keep the lid open. It is in order to deal with the frequent switch of the dustbin. Press the "close" button to close the lid, and then the circuit resumes its automatic induction function.
- (5) When it's in the inactivity, the indicator twinkles in red every 3 seconds. When the cover is open, the indicator is green. When the cover is closing, the indicator is red. When you use manual open-cover function, the indicator twinkles in green every 3 seconds.
- (6) If the indicator twinkling in yellow every 3 seconds, it means the battery is going to run out. If the dustbin opens and closed over 20 rounds per day, then the battery can be used for 3 months.