

尺寸: 70x90mm——80g书写纸 ——双面印刷,风琴折



# WIRELESS MULTI-PLATFORM GAMEPAD GT-60

English

BORN FOR GAMING  
WWW.MARVO-TECH.COM

## PRODUCT PRESENTATION

### FEATURES:

- Wireless gamepad with built-in battery
- Multi-platform compatible (PC, Android (smartphone, TV, media box))
- Two operating Modes: Gamepad (Android & PC), Mouse/Media (Android),
- Wired mode (X-input) available on PC

### TECHNICAL SPECIFICATIONS

Wireless versions: 2.1 + EDR  
 Connection: wireless or wired (USB cable)  
 Battery capacity: 350 mA  
 Charging time: 1.5 h  
 Usage time: 6 - 10 h (continuous)  
 Compatibility: Android and PC  
 Smartphone clip size: 4 - 8.5 cm

### SYSTEM REQUIREMENTS


PC system or compatible with one USB port available, Windows 10 or newer operating system.

### SAFETY NOTES



- Keep the equipment dry. Keep away from precipitation, humidity, all types of liquids and condensation.
- Do not use the product with wet hands.

- Do not use or store the equipment in dusty or dirty areas.
- Do not store the equipment under high-temperature or low-temperature conditions (this may damage it).
- Do not drop, knock or shake the equipment as it may damage it.

## LAYOUT

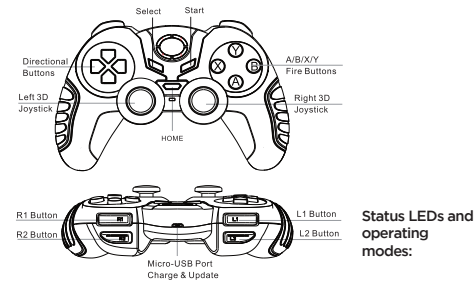

Operating Mode	Gamepad Android	Mouse & Media	Charging
Status LED	On	On	On
LED 1	On	On	On
LED 2	On	On	On
LED 3	On	On	On
LED 4	On	On	On

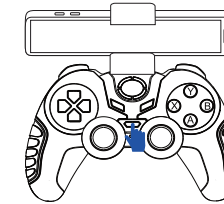
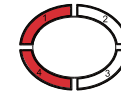


Press the HOME button for 3-5 seconds to start/stop the gamepad.  
 The gamepad will automatically enter Sleep mode if it is not used for 5-10 minutes. Press the HOME button to exit Sleep mode.  
 Use the included clip to attach the terminal (eg smartphone) to the gamepad.



## USE

### ANDROID DEVICES

1. Press the HOME and X buttons until the LED 1 flashes.
2. Access the wireless area on the Android terminal and scan for nearby equipment.
3. Press the GT-60 when it is detected by the Android terminal.
4. LEDs 1 and 4 will illuminate when the connection is successfully completed.

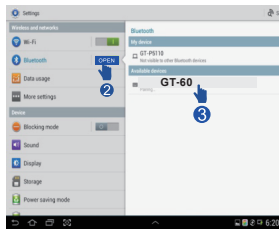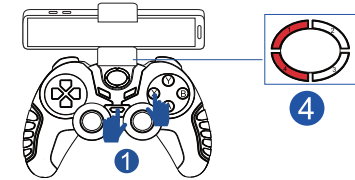

**Switch between Analog and Digital mode**  
 In Android mode, you can switch the gamepad in Analog or Digital Mode by pressing the HOME button.

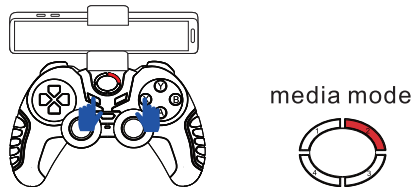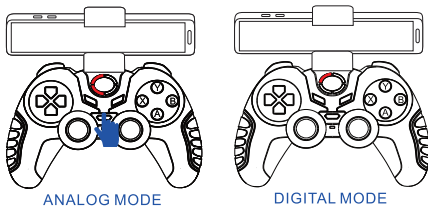


**Switching to Media & Mouse mode**  
 After connecting to the Android device, you can switch the gamepad in Media & Mouse mode by pressing the SELECT and X buttons.

### Media & Mouse Gamepad Functions:

- |  |                                    |
|--|------------------------------------|
| A/L1: left mouse button                  | Y: Play                            |
| B/R1: right mouse button                 | Select: Back                       |
| Directional up: keyboard up              | Start: Menu                        |
| Directional down: keyboard down          | HOME: Home                         |
| Directional left: keyboard left          | Left joystick up: mouse up         |
| Directional right: keyboard right        | Left joystick down: mouse down     |
| L2/Right joystick down: Voice -          | Left joystick right: mouse right   |
| R2/Right joystick up: Voice +            | Left joystick left: mouse left     |
| Pressing left joystick: website back     | Right joystick right: Next song    |
| Pressing right joystick: website forward | Right joystick left: Previous song |

### CONNECTING TO PC (WIRED ONLY)

The gamepad supports D-input and X-input modes for use on PC platforms. X-input mode is for the Xbox Game Center in Windows 10.

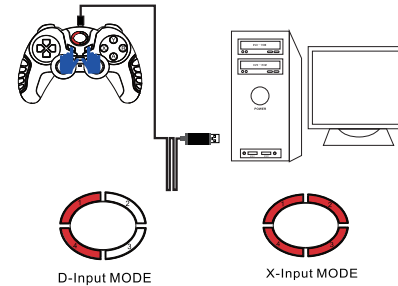

1. Connect the Micro-USB plug of the included cable to the gamepad's charging port.
2. Connect the USB cable to a port on your computer.
3. The Windows operating system will automatically detect and install the gamepad.
4. After connecting LEDs 1 and 4 will flash to indicate D-input mode as active mode.
5. Press SELECT and START to switch to X-input mode.

### ANDROID GAMES

1. Open the web browser on your terminal and go to <https://play.google.com/store> or click Play Store.
2. In the Search field, enter and search for Gamepad compatible games.
3. A list of compatible games will be displayed.
4. Select the game you want and install it.

## TROUBLESHOOTING

In case of incorrect operation follow the steps below:  
 - Check the integrity of the connectors;  
 - Check the connection to the computer correctly;  
 - Check the correctness of your computer settings;  
 - Disconnect and reconnect the equipment, restart the computer.  
 If the problem persists, please contact your local seller.

## GENERAL INFORMATION

- Unauthorized repairs or disassembly of the product will void the warranty and may cause its damage.
  - This product is safe and complies to EU requirements.
  - This product is manufactured conforming with the European RoHS standard. This standard was introduced to reduce the amount of electrical and electronic waste emitted into the atmosphere.
  - Using the WEEE symbol (the crossed-out bin) indicates that this product is not household waste. When recycling waste properly, you protect the environment and people health.
- Segregated household waste collection, aids recycle materials and components used for the production of this device. For detailed information about recycling, please contact your retailer or a local authority.

## WARRANTY CARD

Product Model:	Product Serial No:
Date of Purchase:	Customer Name:
TEL:	Address:
Distributor Name:	TEL:

Warranty Card is the important certificate for after-sale service of Marvo products, Please keep it appropriately.